

www.echorobotics.com

## Charging Station Technical Manual CGSL01AF1 CGSL11AF1 CGSL21AF1



P/N X7507850001

VERSION 2.2

02/26/2020



## **Table of Contents**

Chapter:	1	Safety Information
		Safety Symbols
Chapter:	2	Model Descriptions and Specifications
Chapter:	3	Charging Station Components
Chapter:	4	Installation Requirements
		Required Tools
		AC Power Supply Wiring
		Installation Offsets
Chapter:	5	Charging Station Installation Procedure
		Peripheral Wire Installation
		14 AWG AC Wire Installation
		Securing the Base
Chapter:	6	Powering ON
		LED Indicators
Chapter:	7	Maintenance Procedures
		Cold Weather Storage (as installed)
		Cold Weather Storage or Moving (removed from installation) 9
Chapter:	8	Dimensions
		Mower Configuration
		Range Picker Configuration

©2020 ECHO Incorporated. All Rights Reserved.

This manual, or parts thereof, may not be reproduced in any form, by any method, for any purpose.

ECHO has taken reasonable care in compiling this document, however ECHO accepts no liability whatsoever for any error or omission in the information contained herein and gives no other warranty or undertaking as to its accuracy.

ECHO can accept no responsibility for damages, resulting from the use of the operating software. In addition, we refer to the conditions of use specified in the license contract. ECHO reserves the right to amend this manual at any time without prior notice.

ECHO and its affiliates are not liable for damages or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

This manual contains the original instructions. Information contained in this manual is provided as an indication and is in no way contractual. It can be changed by ECHO, without the need for prior announcement. Obtain updated information at www.echorobotics.com.

The robot has been designed to high safety standards. Risk is always possible. Read and understand all safety information.

Genuine ECHO Robotics parts are available only from an authorized ECHO Robotics Dealer. Always supply a model and serial number when purchasing parts and assemblies. Only use and authorized ECHO Robotics Dealer for service procedures.

This equipment has been tested and found to comply with the limits of a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

www.echorobotics.com

## **Safety Information**

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

#### **DANGER**

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

#### **WARNING**

The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

#### 

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which may lead to minor or moderate personal injury if not avoided.

#### NOTICE

The enclosed message provides information necessary for the protection of the unit.

#### Safety Symbols

◮◢◮◮炎炎๏ ềềề¤ề∰©®	Safety and Information Label
	Caution: The robot can be dangerous if misused.
	Never place hands or feet under the robot while it is powered ON.
	Beware of projectiles.
	Keep animals away from the robot.
$\bigotimes$	Water cleaning with high pressure jet systems can cause damage.
	The robot is protected by an access code.
<b>(</b>	Read the technical manual before using the robot.
50P	Press the STOP button and wait for the cutting disc to stop rotation before handling the robot.
<b>∎</b> ⇔ <b>n</b>	Always keep a safe distance from the robot when is it powered ON and the cutting discs are rotating.
	Do not ride on the robot.
	Keep bystanders away from the robot.
	Wear protective gloves when handling the robot.
	The robot is equipped with an anti-theft system.
	General Prohibition Symbol
$\bigcirc$	This symbol means the specific action shown is prohibited. Ignoring this symbol can result in damage to property and serious or fatal injury.

# Model Descriptions and Specifications

Model	Description	
CGSL01AF1	Supports the Station Loop peripheral wire only.	
CGSL11AF1	Supports the Station Loop peripheral wire and one Field Zone peripheral wire.	
CGSL21AF1	Supports the Station Loop peripheral wire and two Field Zone peripheral wires.	

Specifications (all models)				
Operating Temperature	32 to 122 °F (0 to 50° C)			
Input	120 VAC - 60 Hz (360 W maximum)			
Charge Outputs	32 VDC (320 W maximum)			
Output Circuits	Class 2			

## Charging Station Components



- 1 Enclosure top
- 2 Debris cover
- 3 Charging arm
- 4 Enclosure base
- 5 Input panel / Serial number location

## Installation Requirements

- 1) Develop an installation plan and a map of the site.
- Identify the location for installing the AC power supply, Station Loop peripheral wire(s), and Field Zone peripheral wire(s).
- 3) Install the charging station on flat ground where flooding or water accumulation will not occur.
- 4) Do not bend, warp, or crack the base of the charging station during installation.

#### **Required Tools**

8 mm Deep-well Socket / Driver	Tape Measure	
3 mm Flat-Blade Screwdriver	Hammer	
#1 Phillips Screwdriver	Slip-Joint Pliers	
Adjustable Wrench	T-27 Torx <sup>®</sup> Driver	
Wire Strippers	(included with charging station)	

#### **AC Power Supply Wiring**

Use 14 AWG electrical wire and  $\frac{1}{2}$  in. diameter liquid-tight electrical conduit for AC power into the charging station.

**NOTE**: Wire and conduit are not included with the charging station.



- 1 Ground (green)
- 2 Neutral (white)
- 3 Line (black)
- 4 Liquid-tight electrical conduit

#### Installation Offsets



If the entire field is on a slope, install the charging station on a flat portion at the top. The robot has no brake when it is in charge mode and can slide away from the charging arm contacts if the longitudinal slope is greater than zero degrees  $(0^{\circ})$ .

## Charging Station Installation Procedure

This is a basic installation procedure. Each installation varies by application. Consult your authorized ECHO Robotics dealer for specific questions.

**IMPORTANT**: Do not bend, warp, or crack the base during installation.

1) Clear away debris from the installation area.



 Remove the charging station from its packaging. Lift if from the base, do not lift it from the charging arm.



- 3) Remove the enclosure top from the base.
- 4) Range Picker applications only: Remove the enclosure top, carefully lift it, rotate it 180°, and place it back onto the base (ensure no wires are pulled or pinched).



5) Move the charging station to the final installation location. Place the front of the enclosure top the required distance from the station loop peripheral wire.



- 1 Front of enclosure top
- 2 Station Loop peripheral wire
- 3 Field Zone 1 peripheral wire
- 4 Field Zone 2 peripheral wire

#### **Peripheral Wire Installation**

 Route all peripheral wires under the base and up through a cord grip. Allow a minimum length of 15.7 in. (400 mm) of each wire inside the enclosure top. Provide excess wire under the base for future repositioning.



1 – Peripheral wire

2 – Cord grip

- 2) Hand tighten the cord grips.
- 3) Remove 0.3 in. (8 mm) of insulation from the end of each wire.

4) Loosen the surge protector(s) terminal screws, insert the ends of the wires into the surge protector(s) at the locations shown, securely tighten the terminal screws.



- 1 Peripheral wire
- 2 Surge protector
- 3 Power wires (pre-assembled to surge protector(s)
- 5) Use an adjustable wrench or slip-joint pliers to securely tighten the cord grips.

#### 14 AWG AC Wire Installation

1) Pull the wires through the conduit and the connector. Place the seal on the threaded side of the connector.



- 1 14 AWG AC wires
- 2 Liquid-tight conduit
- 3 Conduit connector
- 4 Seal
- Place the connector into the input panel. Assemble the nut (from inside of panel) onto the connector. Allow 15.7 in. (400 mm) of wire on the inside of the enclosure top.



1 – Conduit connector

2 – Nut

- 3) Remove 0.4 in. (11 mm) of insulation from the end of each wire.
- 4) Install each wire into its corresponding large terminal block opening.
- 5) Insert a flat-blade screwdriver into the small opening of the terminal block directly behind the wire and pry the spring contact open. Only install one wire per terminal block opening. The stripped ends of the wire (or stray strands of wire) must remain on the inside of the terminal block.



- 1 Small terminal block openings
- 2 Large terminal block openings
- 6) Remove the screwdriver. Firmly pull each wire to verify a secure connection.

#### Securing the Base

Mower application only: Remove underground hazards below the charging station. Use a hammer to install the four landscaping spikes to secure the base to the ground.



Range Picker application only: Use the appropriate size and type of fastener to secure the charging station to the foundation of the ball collection system.



## **Powering ON**

The power switch is located under the debris cover.

Move the power switch to the ON position to energize the DC output of the charging station and the peripheral wires.

**NOTE**: When the power switch is in ON position, the TEST LED <u>will not</u> illuminate.

Move the power switch to the OFF position to turn off the DC output. Move the power switch to the TEST position to energize the DC output of the charging station and the peripheral wire(s).

**NOTE:** When the power switch is in the TEST position, the TEST LED <u>will</u> illuminate.



1 – Power switch

- 2 Debris cover (cut-away view shown)
- 3 ON position
- 4 OFF position
- 5 TEST position

#### **LED Indicators**

Four LED indicators are located on the input panel on the back side of the charger.

**IMPORTANT**: If an LED is not illuminated, AC power may still be present.

TEST LED	Illuminates green when AC power is present and the power switch is in the TEST position.			
SL (Station Loop) LED	Blinks green when the station loop peripheral wire is correctly connected, blinks red when an issue is detected.			
Z1 (Field Zone 1) LED	Blinks green when Field Zone 1 peripheral wire is correctly connected, blinks red when an issue is detected.			
Z2 (Field Zone 2) LED	Blinks green when Field Zone 2 peripheral wire is correctly connected, blinks red when an issue is detected.			



- 1 Input panel
- 2 TEST LED
- 3 SL (Station Loop) LED
- 4 Z1 (Field Zone 1) LED
- 5 Z2 (Field Zone 2) LED

### Maintenance Procedures

During periods of wet weather, perform inspection and cleaning once per day.

- 1) Move the power switch to the OFF position.
- 2) Turn off AC power at the mains (charging station only).
- 3) Remove robot from charging station (if required).
- 4) Visually inspect the unit, replace damaged components.
- 5) Check all electrical connectors, reconnect if necessary.
- 6) Use a plastic scraper, nylon brush, compressed air, or a damp cloth to clean dirt, grass, sticks, or obstructions.

NOTE: Do not use a high-pressure washer or running water for cleaning. Never use solvents.



## Cold Weather Storage (as installed)

- 1) Move the power switch to the OFF position.
- 2) Turn off AC power at the mains.
- 3) Cover the charging station with a non-conductive, waterproof barrier.

## Cold Weather Storage or Moving (removed from installation)

- 1) Move the power switch to the OFF position.
- 2) Turn off AC power at the mains.
- 3) Remove the M5 nuts (8X) from the base of the enclosure top. Save the nuts for reassembly.
- 4) Remove the AC wires (neutral-white, line-black, ground-green) from the terminal block.
- 5) Loosen the conduit connector lock nut (located on inside of input panel). Pull conduit, connector, and AC wires out of the input panel.



- 1 Lock nut
- 2 Input panel
- 3 Conduit, connector, AC wires

6) Assemble a wire nut to the end of each wire. Safely secure the wires and the liquid-tight conduit.



1 – Wire nut

- 7) Remove the landscaping spikes or anchors at the charger enclosure base.
- 8) Label the Station Loop, Field Zone 1, and Field Zone 2 peripheral wires, then, remove them from the surge protectors.
- 9) Loosen the gray cord grips located on the base of the charging station.
- 10) Remove the Station Loop, Field Zone 1, and Field Zone 2 peripheral wires from the charging station.
- 11) Assemble a wire nut to the end of each peripheral wire. Safely secure the wires.

### Dimensions

#### Mower Configuration





#### **Range Picker Configuration**







#### **WARNING**

Cancer and Reproductive Harm

www.P65Warnings.ca.gov

#### **ECHO** Incorporated

400 Oakwood Road Lake Zurich, IL 60047 1-800-392-0329 www.echorobotics.com