

Read the RP-1200 Technical Manual before using the robot

	Safety and Information Symbols
	The robot can be dangerous if misused.
	Never place hands or feet under the robot when it is powered ON.
	Beware of projectiles.
	Keep animals away from the robot.
$\bigotimes$	Water cleaning with high pressure jet systems can cause damage.
	The robot is protected by an access code.
€>	Read the technical manual before using the robot.
	Press the STOP button and wait for the cutting disc to stop rotating before handling the robot.
<b>I</b> ⊷†	Always keep a safe distance from the robot when is it powered ON and the cutting discs are rotating.
	Do not ride on the robot.
	Keep bystanders away from the robot.
	Wear protective gloves when handling the robot.
	The robot is equipped with an anti-theft system.














	Set Operating Instructions
ACTIONS 1. Pick balls 2. Go unload 3. Pick balls after charge 4. Stay in station after charge	<ul> <li>Press in the Smartbox to access the ACTIONS menu.</li> <li>Use the ACTIONS menu to manually set operating instructions: <ul> <li>Pick balls (instructs the robot to collect balls from the working area)</li> <li>Go unload (instructs the robot to return to the charging station with a drop pit and unload the balls)</li> <li>Pick balls after charge (instructs the robot to collect balls from the working area after it is fully charged)</li> <li>Stay in station after charge (instructs the robot to remain in the charging station after it is fully charged)</li> </ul> </li> </ul>
SETTINGS 1. Schedule 2. Roller position 3. Unloading conditions 4. System locking	<ul> <li>Set Operating Parameters</li> <li>Press on the Smartbox to access the SETTINGS menu.</li> <li>Use the SETTINGS menu to set operating parameters:</li> <li>Schedule (sets the daily ball collecting schedule)</li> <li>Roller position (sets the roller position to up or down)</li> <li>Unloading conditions (sets the ball unloading conditions)</li> <li>System Locking (locks access to the Smartbox)</li> </ul>
https://myrobot.echorobotics.com	Log on to Your Robotics Account Record the robot's serial number. Serial Number: Open the email received from your purchasing dealer. Follow the link in the email to log on to your robotics account. Download and read the RP-1200 Technical Manual before using the robot.







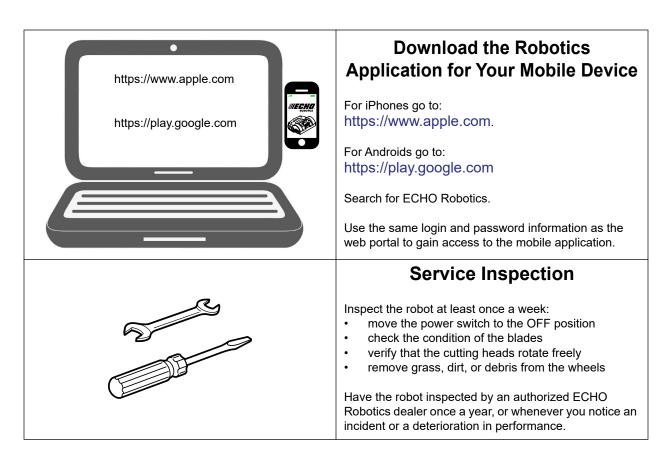



Cancer and Reproductive Harm. www.P65Warnings.ca.gov



ECHO Incorporated 400 Oakwood Road Lake Zurich, IL 60047 1-800-392-0329 www.echorobotics.com





P/N YB-071-00016-0A REVISED 11/05/2019